



Pre-Installation Instructions:

1. Turn off your furnace using either the switch next to the furnace or at the breaker located on the electrical panel
2. Locate your furnace filter bay (slot)
3. Remove the outer door or hatch, if applicable
4. Remove your current filter

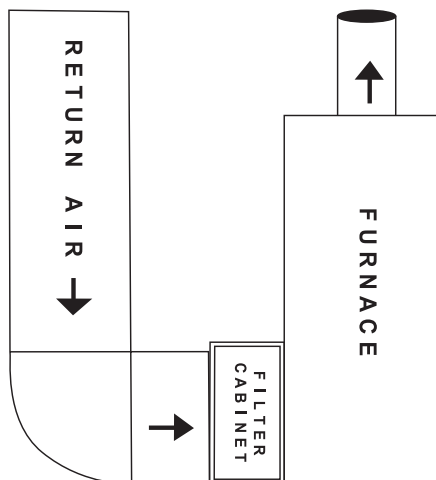

FILTER CABINET

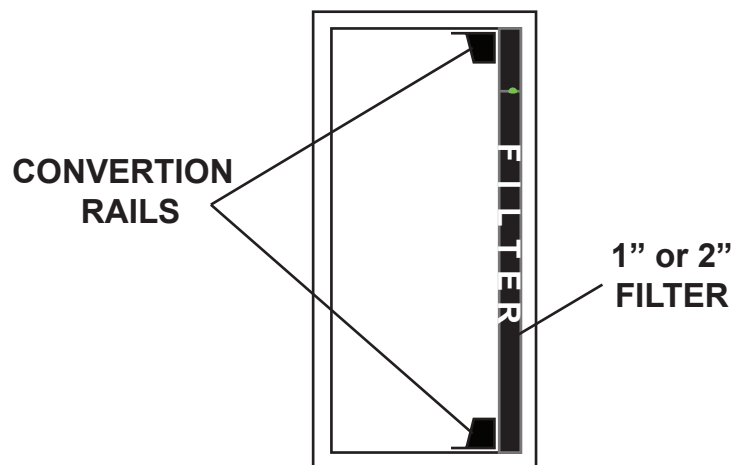

Installation Instructions:

1. Installation of filter and adapter:
 - a. Identify the direction of air flow in your filter bay.
 - b. Install filter before installing filter rails. Slide filter into the filter bay/slot and position closest to the furnace side of the filter bay.
 - c. Insert the top adapter rail, widest edge will be against the filter. Magnets will secure the adapter to the top edge of the filter bay.
 - d. Insert the lower adapter rail, widest edge will be against the filter. Magnets will secure the adaptor to the bottom edge of the filter bay.
 - e. Push rails snug against to the filter. Filter adapter rails do not need to be removed during future filter replacements. They now form a guide allowing the 1" or 2" filter to slide in and out of the filter bay. Screws are provided for permanent attachment, if desired.
2. Replace the door
3. Turn on furnace